


Instruction Manual for

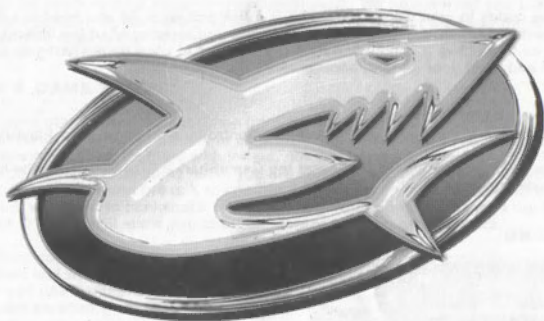

GAMESHARK
Video Game Enhancer

For use with all PlayStation® game consoles
including the 9000 series and higher

So you Wanna Beat The Game?

Now that you have purchased GameShark® CDX 4.0, let us show you how!

GameShark® CDX is completely menu-driven. You don't need to add codes letter by letter or number-by-number every time you turn your machine on. All you need to do is highlight the enhancement code you want to use and start playing games like never before!

The GameShark®CDX is more technologically advanced than any other game enhancer on the market today. It promises to take your game play to a higher level—arming you with the most devastating codes available and showing you how to go even further by creating your own havoc-wreaking codes!

Adding new codes to your GameShark CDX is quick and easy. All you need is a Playstation memory card and the user friendly interface allows you to enter all of the hottest new codes! If you don't have a Playstation memory card, go to www.gamesharkgear.com to buy a card and all of your gaming accessories.

START-UP INSTRUCTIONS

1. Make sure a game controller is inserted into Controller Port #1 on your PlayStation® console.
2. Open the lid on your console and insert the GameShark® CDX CD. Close the lid and press the power button on your console.

MAIN MENU

The Main Menu is composed of 4 items:

- 1) Start game
- 2) Select game
- 3) Options
- 4) Explorer

Press up and down on the directional pad (D-Pad) to highlight one of these items, and press the X button to select it.

START GAME

Selecting this option will bring you to the Start Game Menu, which contains the following choices:

- 1) With Codes
- 2) Without
- 3) Main Menu

Press up and down on the directional pad (D-Pad) to highlight one of these options, and press the X button to select it.

Option 1: With Codes

This option starts the game using the enhancement codes chosen from the Game Select menu. You will be prompted to remove your GameShark® CDX and insert the game CD.



Option 2: Without (Codes)

This option starts your game without any enhancement codes. The game will play as normal. You will be prompted to remove your GameShark® CDX and insert the game CD.

Option 3: Main Menu

This option takes you back to the main menu.

ADDING NEW CODES

To add new codes to your GameShark® CDX, you must first insert a regular memory card into one of the memory card slots on your PlayStation. We recommend you keep a spare memory card specifically for saving all of your codes. You must then add the title of the game if that title does not already exist in the pre-loaded list of games.

ADDING A GAME TITLE

To add a game title, choose Select Game from the Main Menu and press your X button. Next select New Game – and press X to confirm. The Add New Game Menu will appear. You will be presented with a box filled with letters, numbers and symbols. Use your D-pad to select the characters of the game name you are entering and press Select on your controller, select SAVE and press X to confirm this will save your new entry to the Select Game List. If you need to backspace whilst entering your game name press the triangle button. The O button will allow you to toggle between letters and numbers.

NOTE: New codes will be saved to your memory card and will appear in your games list whenever you use GameShark with your memory card inserted.

ADD NEW CODE MENU

Once you have added the title of your game to the Select Game List, it's now time for you to add your new codes to the GameShark® CDX!

As soon as you've saved your New Game name you're straight into the Add New Code MENU from which you can enter codes to use with your newly entered game. This is where you will give your new codes descriptions. You will probably want to name your new enhancement codes after their functions.

For example, if a code gives you a large number of lives, you may want to name that code "Infinite Lives."

Enter the description of the code as you did earlier when entering the title of the new game.

When you've finished entering the name of the code press Select on your controller to take you to the left of the screen.

If you do not wish the code you are entering to be active whenever you play that particular game with GameShark CDX then select change "Default On" to "Default Off". Then highlight SAVE and press X to confirm.



ENTERING CODE VALUES

After you have entered a description for your enhancement code the cursor will move to the Add New Value window

Modify the code value you are entering using the Left and Right on your D-Pad to highlight the digit you want to change and Up and Down to change the value.

Press Select when you have finished entering your code value.

Most codes will be a one line combination of 12 digits, but some codes may be 2 lines or longer. Individual codes can sometimes be quite long, so a bit of concentration may be required!

To continue adding code values for the title select New Value and repeat the above sequence.

You can add additional codes to any game simply by selecting the game, highlighting New Code, pressing the X button and following the entry steps as above.

NOTE: New codes will be saved to your memory card and will appear in your games list whenever you use GameShark with your memory card inserted.

NOTE: Each code is usually only one line, and each code should have one description. Do not make the mistake of entering all of a game title's GameShark CDX codes into one description. Enter a description for each code you add.

DELETING AN ENHANCEMENT CODE

If you want to delete an enhancement code, simply highlight the description of the code press Select on your controller – highlight Delete Code and press X to confirm. A message will appear asking if you are sure you want to delete the code. Use the D-pad to highlight Delete Code and press the X button to confirm.

NOTE: Preloaded codes may not be deleted, as they are loaded from the CD.

DELETING A GAME TITLE

If you want to remove a game title from your list, go to the Select Game Menu, highlight the game title that you want to delete and press Select on your controller, then select the Delete Game button. You will be given a choice to Delete Game or Cancel. Highlight Delete Game and press the X button. The game and its codes will disappear from the list.

Note: Preloaded games may not be deleted, as they are loaded directly from the CD.

SELECT GAME

This option takes you to the Game Select Menu, which contains the list of pre-loaded PlayStation® game titles supported by GameShark® CDX. All titles are listed alphabetically in the code list window. The window below the code list will display how many codes are available for the highlighted game and how many codes are currently active. Press Up or Down on the D-Pad to highlight the desired game and press the X button to select it.



Once you've selected a game, a full list of enhancement codes will appear on the screen for that game. Press Select on your controller to access the list. These descriptions represent a code. Press Up or Down on the D-Pad to highlight an individual code. You can activate/deactivate almost any combination of enhancements by pressing the Triangle button. An asterisk (*) to the left of the code description indicates the code is active.

When you are finished selecting the desired codes, press Select on your controller and highlight the Game Select option, press X to return to the previous menu or the Start button on your controller to go to the Start Game menu.

NOTE: Some games require an access code labelled as (M), which means "ALWAYS MUST BE ON." This code will be highlighted in green at all times or the GameShark® CDX will not be able to load the game properly. There may be future titles that require this access code. If an (M) is required on new games, it will be made available with codes for that game.

OPTIONS

Choosing Options from the Main Menu allows you to choose from the following:

Option 1: Bubbles On/Off

Let's you turn the background bubbles ON or OFF.

Option 2: Scrolling On/Off

The background can either scroll or remain stationary. Press the X button to toggle ON and OFF.

Option 3: Code List Options

This option allows you to switch between four different menus of games.

- 1.) List 1: A-E
- 2.) List 2: F-M
- 3.) List 3: N-R
- 4.) List 4: S-Z

Using the directional pad select the list that you would like to view and press the X button to make the selection.

Option 4: Main Menu

Returns you to the Main Menu

EXPLORER

Choosing Explorer from the Main Menu allows you to choose from the following:

Option 1: Play CD Music

This option allows you to play either music tracks stored on a PlayStation game CD or a normal audio CD. Use the directional pad to highlight which button on the CD Player you want to activate then press the X button on your controller to make the selection.

Option 2: View CD Movie

This option allows you to view movies stored on a PlayStation game CD. If there are any viewable movies available a list will be displayed after selecting this feature. Use the directional pad to highlight the movie that you would like to view and press the X button on your controller.

NOTE: Not all games contain viewable movies, and not all movies are viewable with this feature.

Option 3: Returns you to the Main Menu

GOT NEW GAMES? NEED NEW CODES? FIND THEM EVERYWHERE!

o The Official GameShark World Wide Web page:
<http://www.gameshark.com>. Make this your first stop for new codes!

o The Official GameShark Newsletter: GameShark: The Magazine. See the special insert to receive your free issue or call 410-785-4064 to subscribe for 6 issues at \$16/per year.

o The Official Code Hotline: 1-900-773-SHARK. Calls cost \$1.29 per minute, you must be over 18 years old or have your parent's permission to call. In Canada, call 1-900-677-4242.

o Various videogame magazines. Most gaming mags run Gameshark codes each monthly issue!

REGISTER AT GAMESHARK.COM!

Step One: Become a Member

If you have access to the World Wide Web, be sure to log onto www.gameshark.com and become a member of our online community of code hackers! Registration is easy— just click on the GameShark® Information Center button in the upper right hand corner of our home page. Once you've registered, you'll have full access to the greatest gaming web site available. You'll receive email newsletters on codes for just released games, new product releases, and tons of cool gaming content.

Step Two: Register Your Product

You can also register your GameShark® and InterAct® purchases online. After you've registered, you'll receive product specific newsletters, which include product upgrade information and special offers! At the GameShark Information Center, you can also learn everything there is to know about all available GameShark products as well as have your questions answered by the GameShark.com staff and fellow GameShark owners.

Now get your support online!



WARRANTY INFORMATION

InterAct Accessories, Inc. warrants to the original purchaser of this product that it will be free from defects in materials and/or workmanship for a period of ninety (90) days from the date of purchase. If a defect covered by this warranty is discovered within the 90-day warranty period, InterAct Accessories, Inc. will repair or replace, at its option, free of charge, any part that InterAct Accessories, Inc. determines to be defective, provided that a copy of the original sales receipt is included with the product return.

This warranty is limited to the internal works of this product and the external housing. It will not apply if your InterAct product has been damaged by abuse, misuse, negligence, accident, modification, tampering, or by any other causes unrelated to defective materials and/or workmanship.

Repair or replacement as provided under this warranty is the exclusive prerogative of InterAct Accessories, Inc. Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited to 90 days from the date of purchase and are subject to the conditions set forth in this limited warranty. In no event shall InterAct Accessories, Inc. or its affiliates be liable for consequential or incidental damages resulting from the breach of any express or implied warranties.

Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental/consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights, which vary from state to state.

To obtain warranty service within the warranty period: Send the defective item postage prepaid with a copy of the sales receipt, return address and a brief description of the problems you are experiencing to the address below.

For questions, trouble-shooting assistance or to obtain service after the warranty period has expired, contact InterAct's consumer service support team by:

PHONE: 410-785-4064,
Mon - Fri, 9:00 am - 8:00 pm EST

E-mail: support@gameshark.com

World Wide Web: <http://www.gameshark.com>

Mailing Address: InterAct Accessories, Inc.
ATTN: Consumer Service - VG
335 Clubhouse Lane
Hunt Valley, MD 21031

©2001 InterAct Accessories, Inc. A RECOTON® COMPANY. GameShark is a registered trademark of InterAct Accessories, Inc. GameShark Codes ©1996-2001 InterAct Accessories Inc. and/or its suppliers. PlayStation is a registered trademark of Sony Computer Entertainment, Inc. This product is not sponsored, endorsed or approved by Sony. PRINTED IN ENGLAND.



InterAct Accessories, Inc.
A RECOTON® COMPANY

335 Clubhouse Lane • Hunt Valley • Maryland, 21031